 



Optionally, install the LED lamp. Attach the lamp's magnetic pads to the metal plates underneath the lower step. Follow the instructions, depending on which lamp you have received with your stool.


9 LED Lamp with a switch

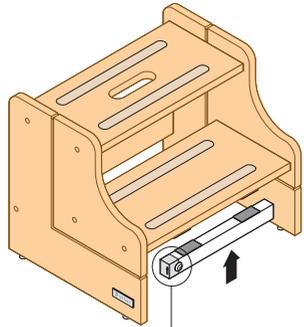

Up is OFF
Mid is AUTO
Down is ON

Use the switch to set the lamp's mode: Up is Off, Mid is Auto, and Down is On.

10 LED Lamp with a button

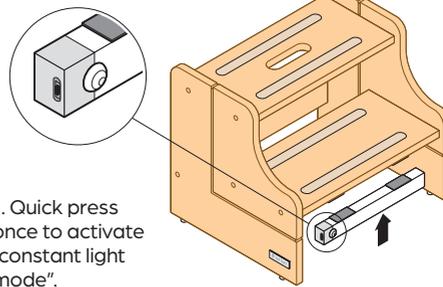

1. Quick press once to activate "constant light mode".
2. Quick press again: if the light blinks twice, it's now in "Night sensing mode", which only illuminates upon detecting motion in low light, ensuring optimal battery conservation.*
3. Quick press again: if the light flashes four times, it's now in "All day sensing mode," turning on when it senses motion regardless of the surrounding light conditions.
4. Quick press again to switch off the LED light.
5. Long press to adjust the light brightness.

*The lamp will stop working in bright environments but will work again in darker settings when it detects motion within 0 to 10 feet. It will automatically turn off after 20 seconds if no motion is detected.

1-YEAR WARRANTY

Rest assured, the stool is designed for longevity. In an effort to provide complete peace of mind, we guarantee that, if there be any defects concerning the material, functionality, or craftsmanship, please contact us directly. We will repair or replace the stool promptly.


To use this warranty, please email the description of your problem, photos, and your order number to support@niftake.com



Email QR Code

This warranty does not cover:

- Any damage caused by improper use or neglect.
- Damage resulting from repairs or alterations made by anyone other than the manufacturer.
- Damage resulting from excessive load beyond the maximum stated weight capacity.
- Damage caused by natural disasters, like fire, flood, or earthquakes.

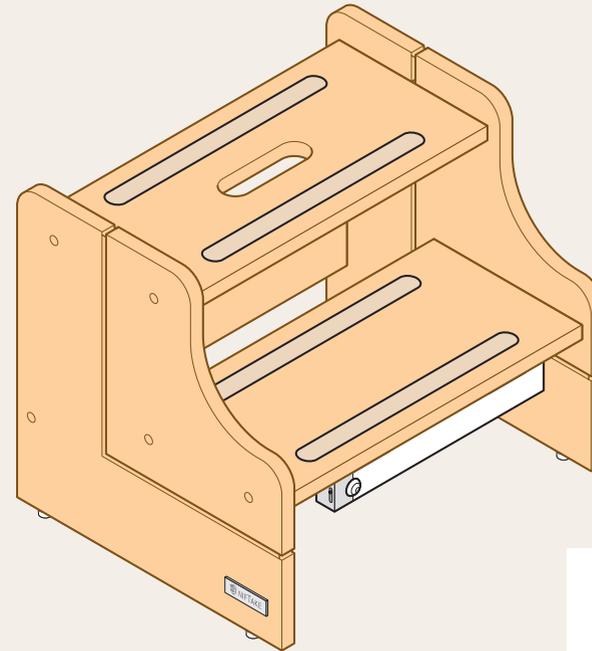

Step-by-step video instructions for super-easy assembly:



Please follow the QR or go to <https://niftake.com/assembly>


Two-Step Bamboo Stool with Automated Night Lights

User manual


Thank you for your trust in our products. We are committed to providing you with the highest quality and service.

In case of any concern or warranty claim contact us support@niftake.com


2 side boards

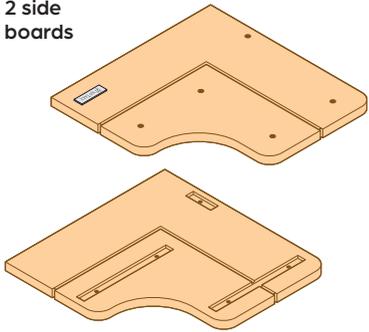


2 steps: upper (with the handle hole) and lower (with two metal plates attached to it)

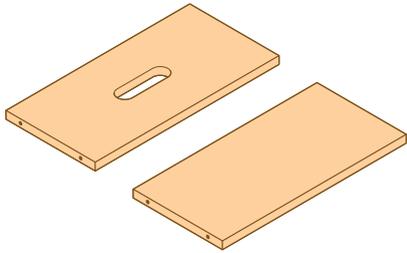


1 support beam

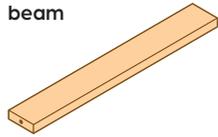


4 silicone feet and 4 screws for them

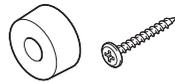


4 anti-slip stickers

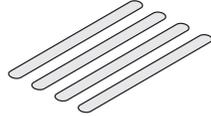

10 bolt covers

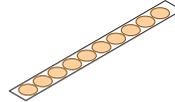


1 LED lamp

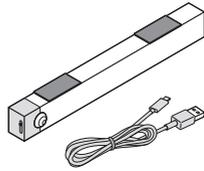

10 bolts




1

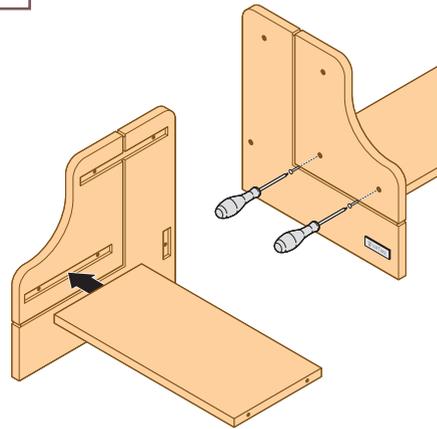


Hold one of the two side boards and attach the lower step (the one that doesn't have a handle hole) to it with two bolts using a screwdriver. Make sure the metal plates on the step face downwards and are closer to the front. Do not tighten the bolts at this step.

2

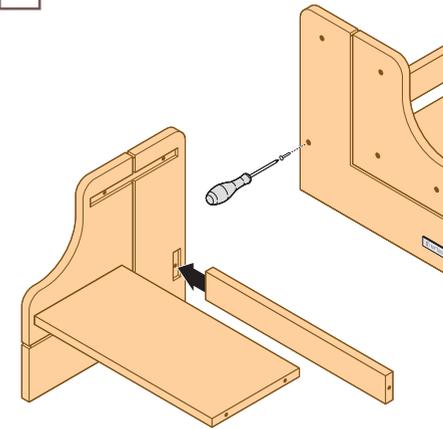


Attach the support beam to the side board with one bolt. Do not tighten the bolt.

3

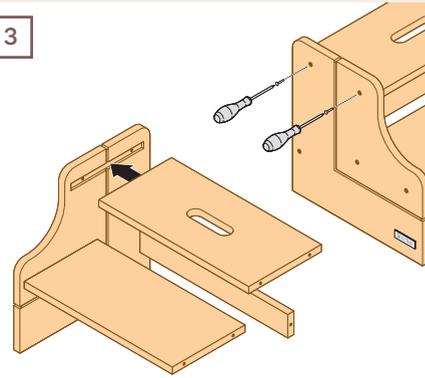


Attach the upper step (the one that has a handle hole) to the side board with two bolts. Do not tighten the bolts.

4

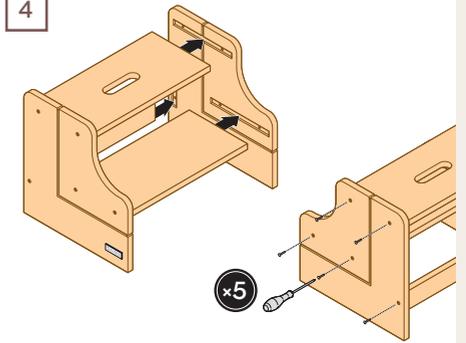


Attach the other side board to the two steps (with two bolts for each) and to the support beam (with one bolt). At this step, you can tighten the bolts, but make sure not to overdo it: stop when you feel resistance.

5

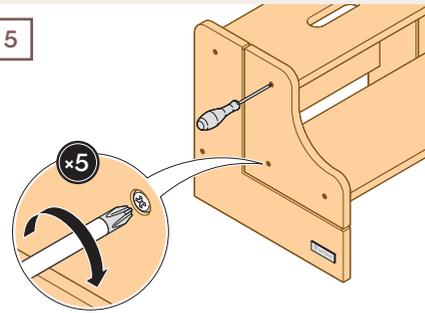


Tighten all the remaining bolts, but make sure not to overdo it: stop when you feel resistance.

6

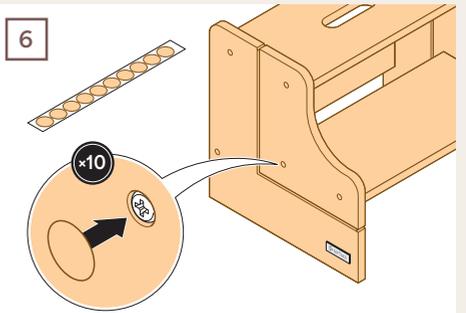


Stick the bolt covers onto the bolt heads all around the stool.

7

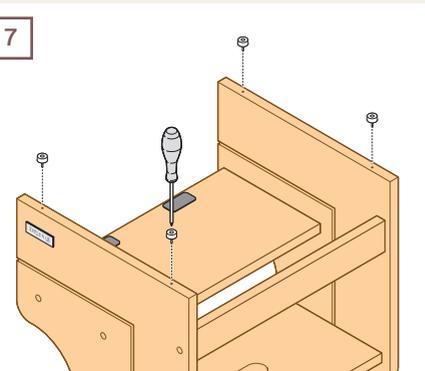

Flip the stool upside down and attach the four silicone feet to the bottom with the four screws using your screwdriver.

8

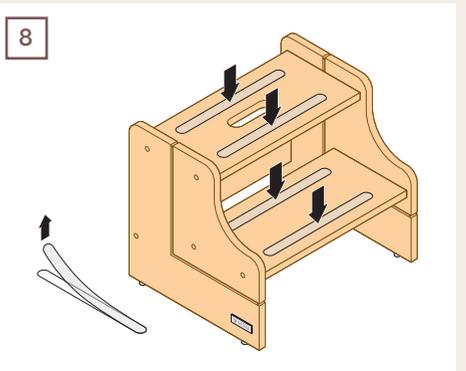

Optionally, install the anti-slip stickers: two on the lower step, and two on the upper step. Remove the protective layer from the stickers.